

# SEASIDE CASUAL FURNITURE

## ENVIRO WOOD

### (60.61) Adirondack Classic & Shellback Bar Chair rev. A



#### Hardware:

- (10) 3-1/2" Connector Bolts
- (12) 2-3/4" Connector Bolts
- (6) 1-3/4" Phillip's Head Screws
- (22) Flat Washers
- (22) Lock Washers
- (22) Nuts
- (4) 3" Hex 1/4" Lags

#### Tools Required:

- Phillip's Head Screwdriver
- 7/16 Socket or Wrench
- 4MM Allen Wrench (Included)

- Parts List:** (1) Seat Assembly (2) Front Legs (Straight Ends) (2) Back Legs (Angled Ends)  
(1) Back Assembly (2) Arm Assemblies (1) Foot Rest (2) Side Leg Stretchers  
(1) Rear Seat Apron (3-1/2" Wide) (1) Rear Leg Stretcher (2-1/2" Wide)

### Assembly Instructions

#### Step One: Set Up

**READ ENTIRE INSTRUCTIONS BEFORE BEGINNING!** Carefully remove contents from box. Make sure that all parts and hardware are included.

#### Step Two: Leg Assembly

Place Seat Assembly on a flat clean surface. Align Front & Rear Legs (5) pre-drilled holes with Seat Assembly pre-drilled holes. Use (5) 3-1/2" connector bolts. Finger tighten bolts with flat & lock washers and nuts. Make sure long ends of Front & Rear Legs are below Seat Assembly (Right Picture). Do not tighten at this time. Flip chair over and repeat process for the other side.



#### Step Three: Back Assembly



Place chair to standing position. Place Back Assembly on top of mounting surface of Rear Legs. Push Back Assembly forward until it is aligned with Seat Assembly (Left Picture). Hold Back Assembly in place and install using (2) 1-3/4" Phillip's Head Screw into pre-drilled holes on both sides of Assembly (Right Picture)




### Step Four: Arm Assembly



Place Arm Assembly on top of Front Leg and Upper Back Yoke (Left Picture). Align hole in Arm Assembly with the hole located at the top of the Front Leg. Install using (1) 2-3/4" connector bolt through hole in underarm support and through Front Leg with flat & lock washers and nuts (Right Picture). Do not tighten at this time. Repeat process on other side.



### Step Five: Arm & Back Attachment

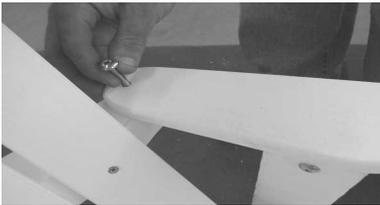


Install (1) 2-3/4" connector bolt through pre-drilled hole through arm and through upper back yoke (Left Picture). Finger tighten flat & lock washers and nuts. Do not tighten at this time. Repeat process for opposite side.

### Step Six: Rear Seat Apron

Install the Rear Seat Apron using (2) 1-3/4" Phillip's Head Screws (Right Picture).



### Step Seven: Foot Rest Assembly

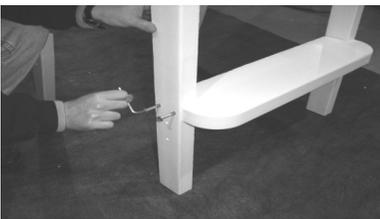


Install Foot Rest using (4) 3" Hex 1/4" Lags (Left Picture)

### Step Eight: Side & Rear Leg Stretchers



Install (2) Side Leg Stretchers using (6) 2-3/4" connector bolts. Finger tighten with flat & lock washers and nuts. Do not tighten at this time (Left Picture). Install Rear Leg Stretcher using (2) 1-3/4" Phillip's Head Screws.

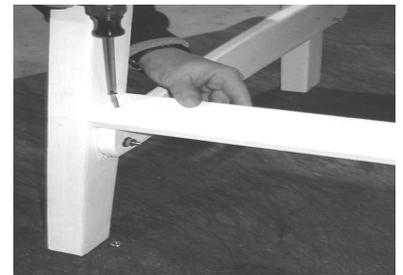

### Step Nine: Tightening of Hardware

Tighten all connections. **Do not over tighten!!! Over tightening of hardware can cause damage to the item.**