

Assembly Instructions

Mission and Van Buren Deep Seating

Tools Needed: hammer, 7/16" wrench, #2 square bit screw driver or power driver, punch
No drilling is required. All the necessary holes are predrilled. Bolts fit snugly in the holes. You may need to use a hammer to drive the bolts through the holes.


Hardware List for Chair: forty-six 2" screws

Hardware List for Love Seat: fifty-eight 2" screws

Hardware List for Sofa: seventy 2" screws



Parts

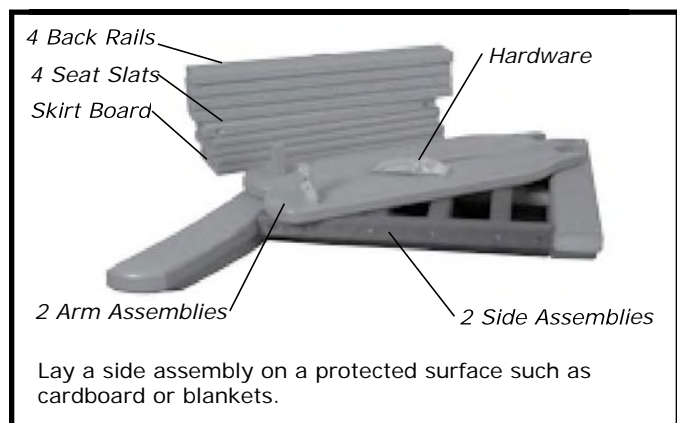

Step 2 — Install the Skirt Board


2" Screws, Skirt Board



Use 2" screws in the pilot holes of the front skirt board to secure it to the side assemblies.

Step 1 — Install Back Rails


2" Screws, Back Rails

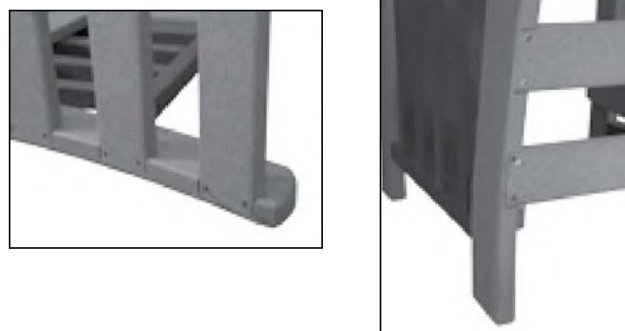

Secure the back rails using two 2" screws in each rail using the pilot holes. Set the assembly upright and secure the other side assembly in the same way.

Step 3 — For Love Seat and Sofa Only

2" Screws, Center Leg Assembly

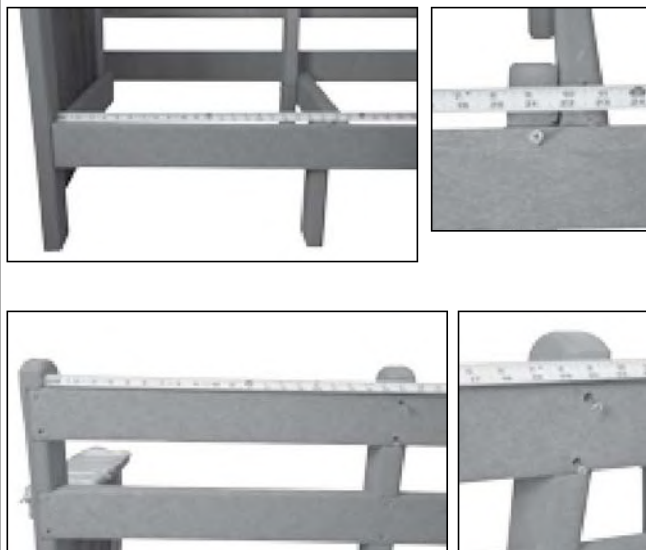

Position each leg with 20 1/4" (20" for sofa) in between the two legs. Measure the top and bottom of the leg to make certain the leg is straight. Secure with 2" screws in pilot holes in leg assembly and back slats.

Step 4 — Install Seat Slats

2" Screws, Seat Slats



Place the rear seat slat against the back slat. Place the front seat slat flush with the front of the skirt. Space remaining slats evenly. Secure using 2" screws in the pilot holes.

Step 5 — Install Arms

2" Screws, Arms



Place the arms on top of the side assembly with the small brace on the outside of the front leg. Attach with five 2" screws per arm.

A. Use one screw in the back.

B. Fasten using one screw in the brace and three screws from the bottom.

Congratulations!
Your Deep Seating furniture
is ready to enjoy!



Chair



Love Seat



Sofa